



# How to Enable DHCP Server

## STEP 1:

- 1) Enable DHCP
  - 2) Add VLAN Range 1 & Enable as default
- Click SAVE

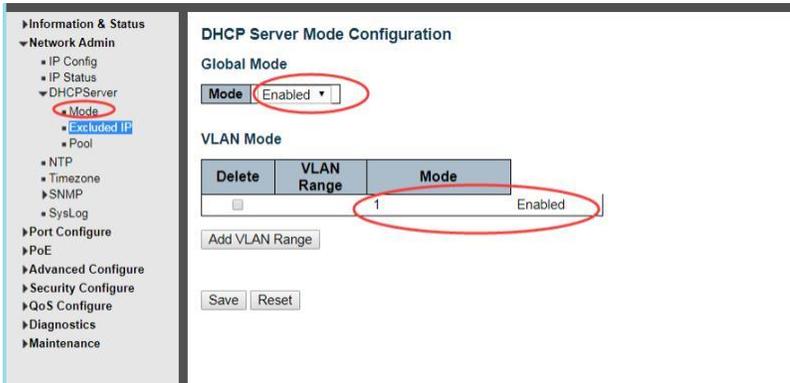

- ## STEP 2: Add a new pool
- Click SAVE

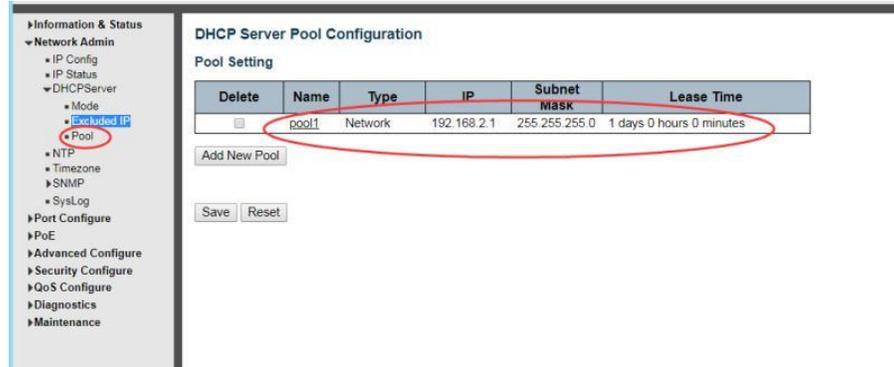

## STEP 3:

- 1) Change Type to "Network"
  - 2) Set IP Address: 192.168.2.1
  - 3) Subnet Mask: 255.255.255.0
- Click SAVE

