

CONTENTS

1. WALL MOUNT BRACKET 1EA
2. SET ANCHOR BOLT (W5/16) 4EA
3. M3.0x6 SCREW 1EA
4. WRENCH (3mm) 1EA

5. MANUAL 1EA

1. If you want to install the speed dome on the concrete wall, you need to make 12.5mm diameter 4 holes by drill like FIG. 1 (Depth 37mm)
2. Install SET ANCHOR BOLT on the holes.
3. Fix the SET ANCHOR BOLT of the bracket by nut (FIG.2)
4. Fit the indoor Bracket into the groove of the Wall Mount Bracket as FIG.3.(FIG.3)
Hang the Safety Wire 1 of the indoor Bracket up in the Wall Mount Bracket and tighten them up with Screw M4 X 10.(FIG.4)
5. Hang the Safety Wire 2 of the indoor Housing up in the Camera as FIG.5.(FIG.5)
6. You can make wires simple by cable ties.
Insert mount holder and twist the camera counterclockwise. (FIG.6)
7. Place the Camera Mount Holder on the Bracket Mount Hole.
To insert them easily, keep 10° interval of Lock Holder1 and Lock Holder2.
8. Screw up Lock Holders with screws. (FIG.7)

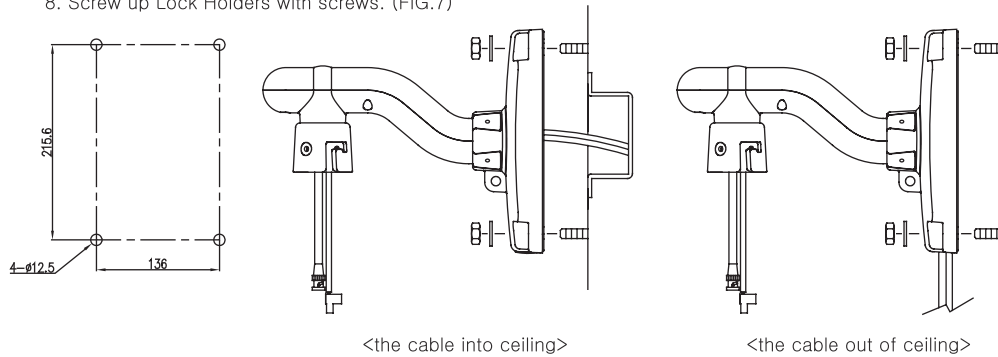


FIG. 1

FIG. 2

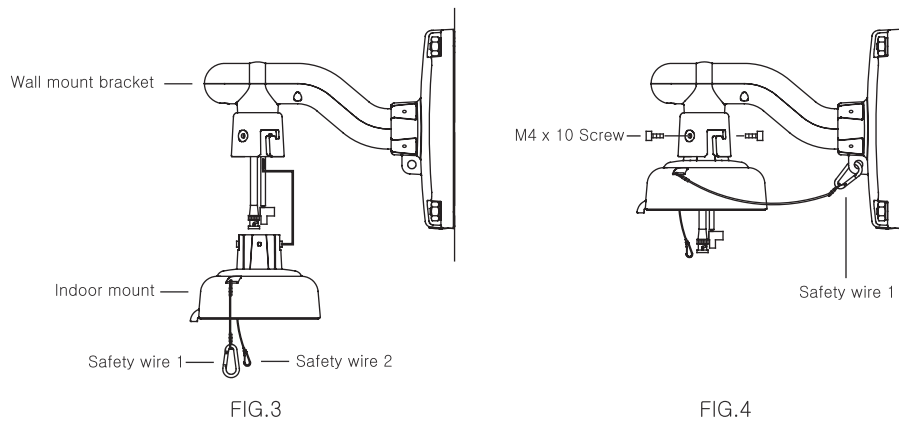


FIG. 3

FIG. 4

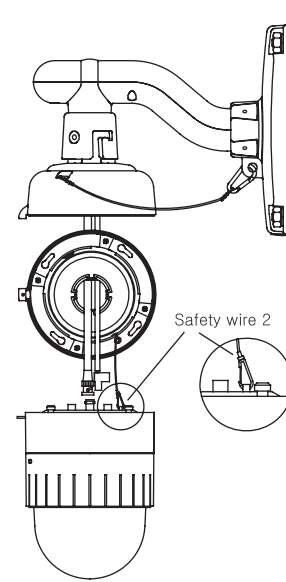


FIG. 5

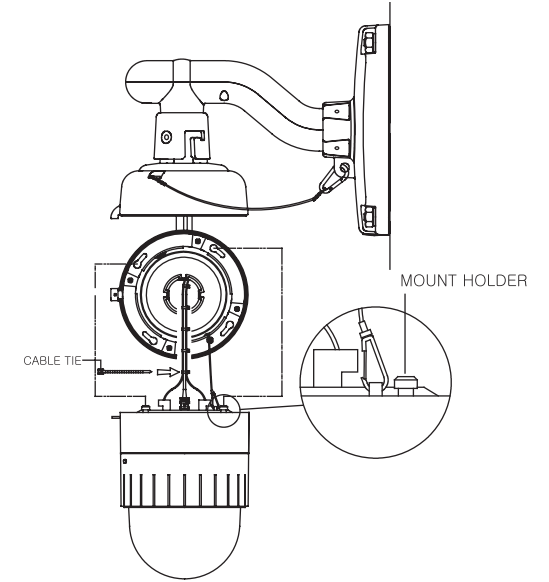


FIG. 6

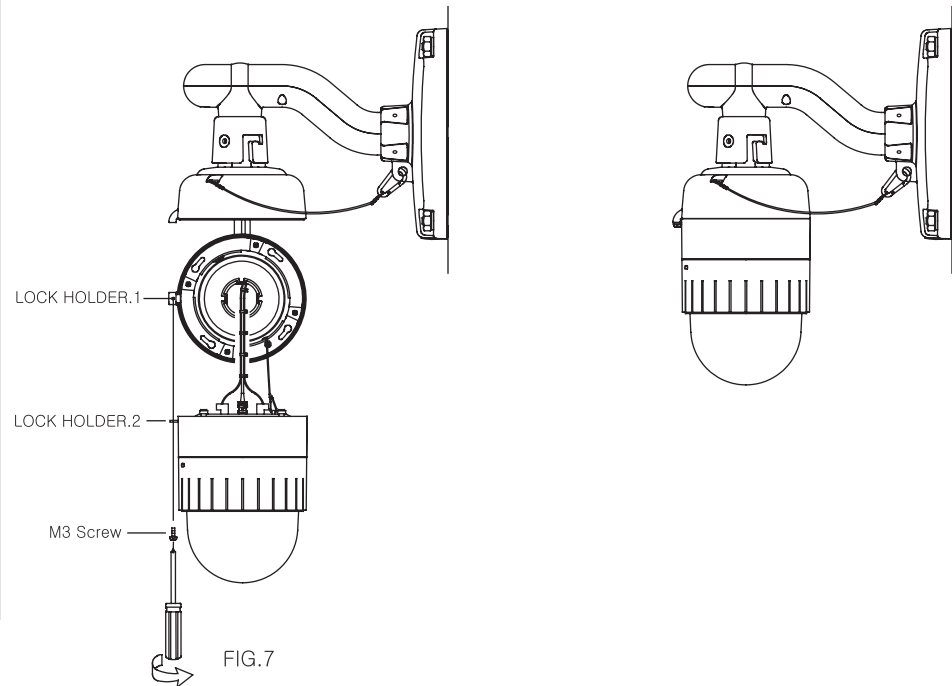


FIG. 7