

## CONTENTS

- |                                |               |
|--------------------------------|---------------|
| 1. CEILING MOUNT BRACKET 1EA   | 5. MANUAL 1EA |
| 2. SET ANCHOR BOLT (W5/16) 4EA |               |
| 3. M3.0x6 SCREW 1EA            |               |
| 4. WRENCH (3mm) 1EA            |               |

- If you want to install the speed dome on the concrete wall, you need to make 12.5mm diameter 4 holes by drill like FIG. 1 (Depth 37mm)
- Install SET ANCHOR BOLT on the holes.
- Fix the SET ANCHOR BOLT of the bracket by nut (FIG.2)
- Fit the indoor Bracket into the groove of the Ceiling Mount Bracket as FIG.3.(FIG.3)  
Hang the Safety Wire 1 of the indoor Bracket up in the Ceiling Mount Bracket and tighten them up with Screw M4 X 10.(FIG.4)
- Hang the Safety Wire 2 of the indoor Housing up in the Camera as FIG.5.(FIG.5)
- You can make wires simple by cable ties.  
Insert mount holder and twist the camera counterclockwise. (FIG.6)
- Place the Camera Mount Holder on the Bracket Mount Hole.  
To insert them easily, keep 10° interval of Lock Holder1 and Lock Holder2.
- Screw up Lock Holders with screws. (FIG.7)


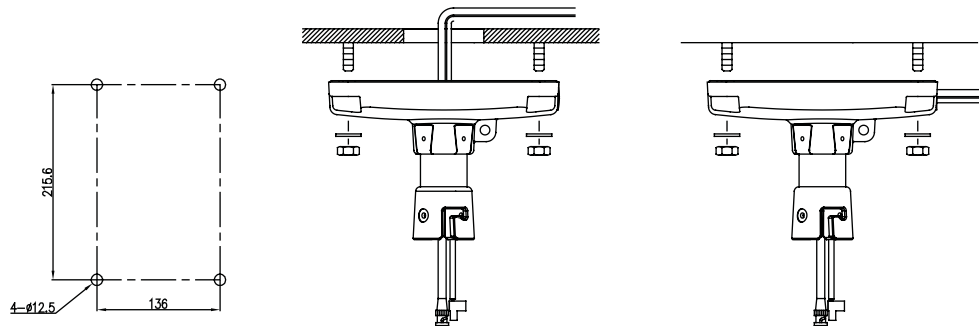


FIG.1

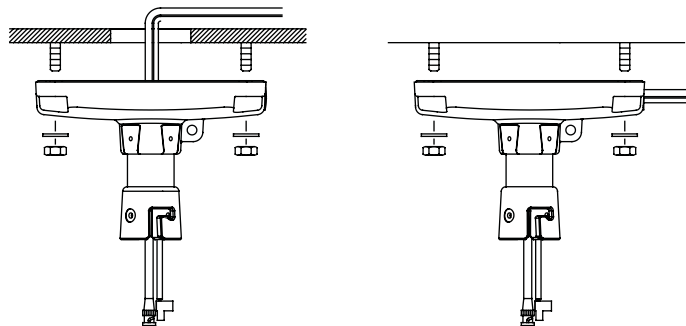

<the cable into ceiling>

<the cable out of ceiling>

FIG.2

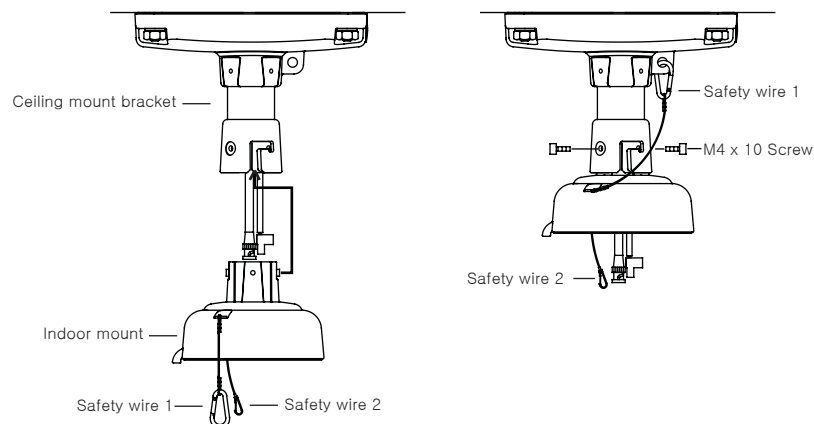


FIG.3

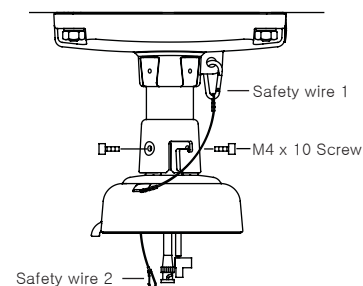


FIG.4

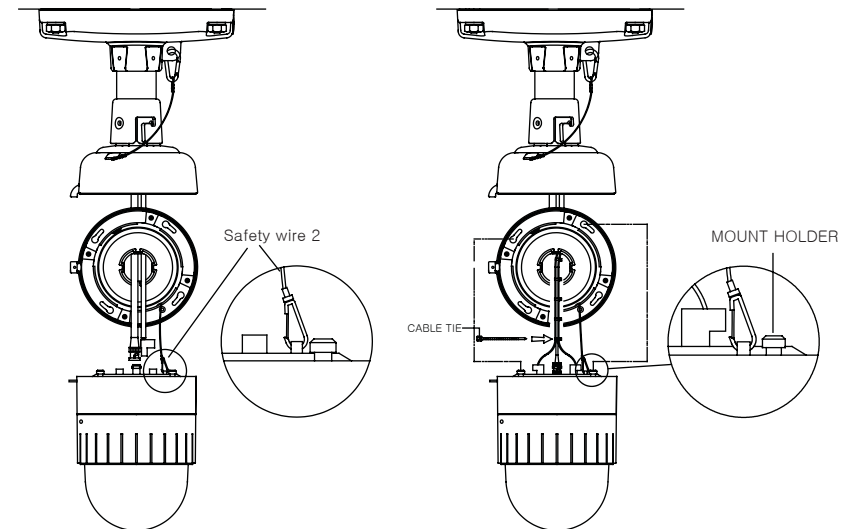


FIG.5

FIG.6

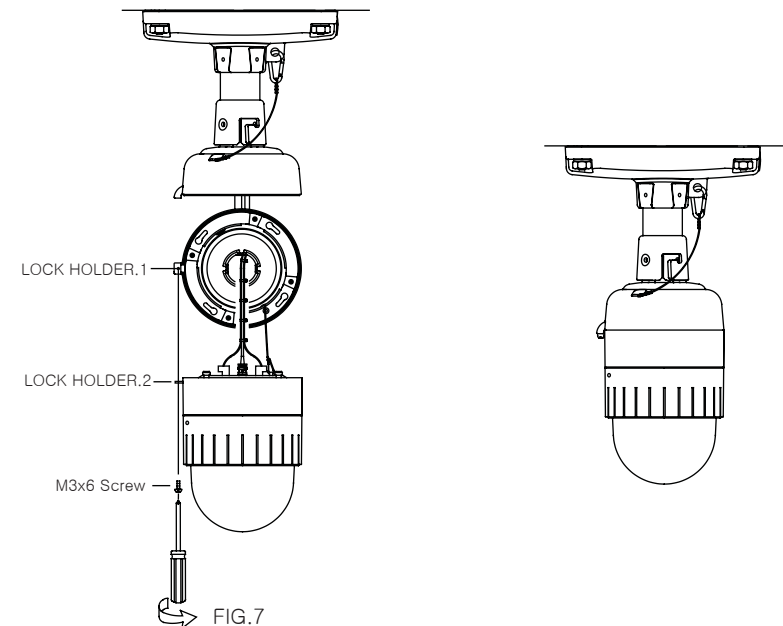


FIG.7