
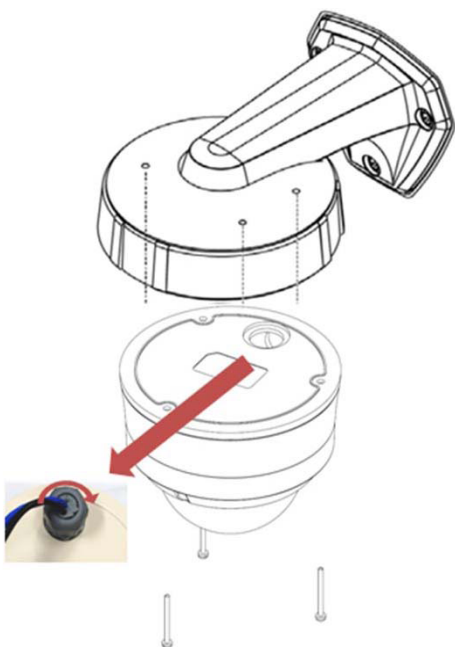


SDWM001M Outdoor Wall Mount Bracket

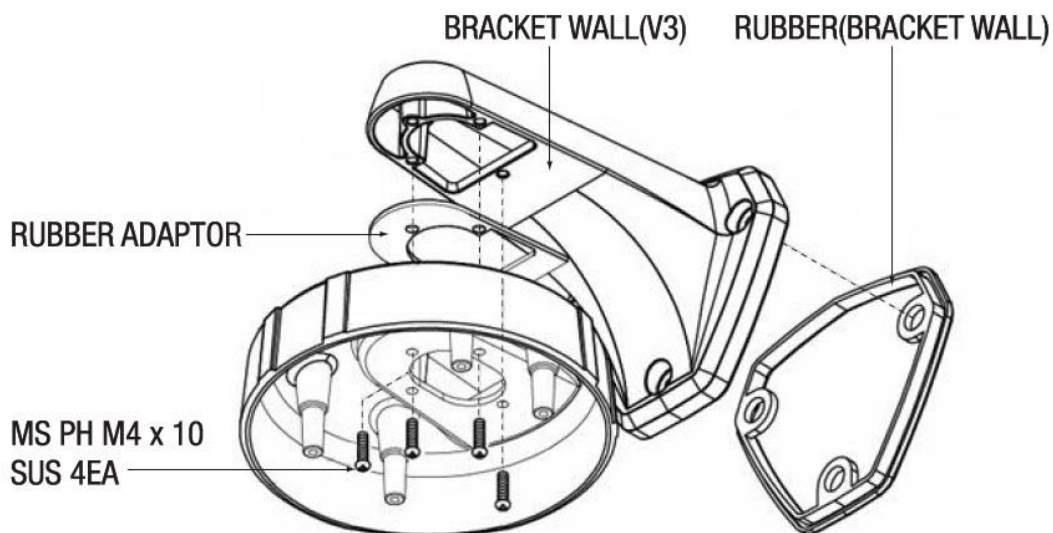

1. Assemble the wall mount bracket assembly..

2. Run the cable through the bracket and attach the mount onto the wall.

3. Fix the Dome Base into the bracket. **The rubber gasket should be placed properly to ensure water tightness after placing the Dome Cover.**

4. Connect the cables.

5. Adjust the position of the lens for desired viewing of the site.

6. Adjust the focus and zoom.

7. Place the Dome Cover.



Total Turnkey Solutions for Outdoor PoE, Wired/Wireless, and IP Video Applications

THE LEADING
OUTDOOR NETWORK
APPLIANCE COMPANY

United States Headquarters

1620 Oakland Road, Suite D101, CA 95131, U.S.A.

PHONE +1.408.392.9800 TOLL FREE +1.888.267.4507 FAX +1.408.392.9812

EMAIL sales@inscapedata.com